

## ARRIVING AT THE MULTIHULL CENTRE BY BOAT



The Multihull Centre boatyard has three mooring areas that we might direct you to depending on the purpose of your visit:

The back slip

The front quay: Pontoon mooring for crane out

The berthing pontoon

Wherever we direct you, please have your own fenders and lines ready to use.

As you can see in the images we are situated in a fully drying tidal area. It's essential that you check tide heights and times in accordance with your vessel's draft prior to arrival. If we are lifting you we will advise of when to arrive.

## How to moor up on the back slip:






The first photo above is from inside the yard looking East and down the slipway. You will see on the left-hand side two wooden posts and a pontoon between them. On the right two buoys. Approach the slip bows on. Tie up tight against the two bouys and leave at least 1.5 m slack between the boat and the pontoon. This is so the trailer can manoeuvre to pick you up. As the tide falls you will be on the concrete. Once the tide has dropped away we will come down with the trailer and lift you into the yard.



## Approaching the Multihull Centre

To approach the pontoon berths and front quay follow the channel around using your navigation.

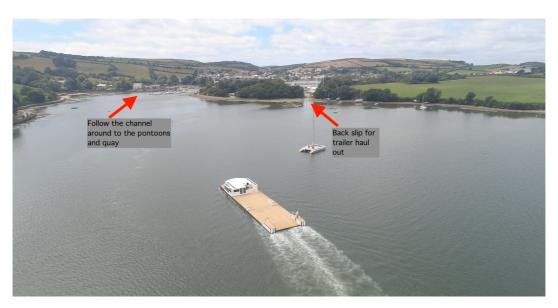

## Approaching the Front Quay.

Come around the corner and past the pontoon. You'll see the quay on your right. If you are being craned out, this is where you will need to go.







We will instruct you on where to moor if you are waiting to be lifted out or staying on our pontoons. We look forward to your visit.